
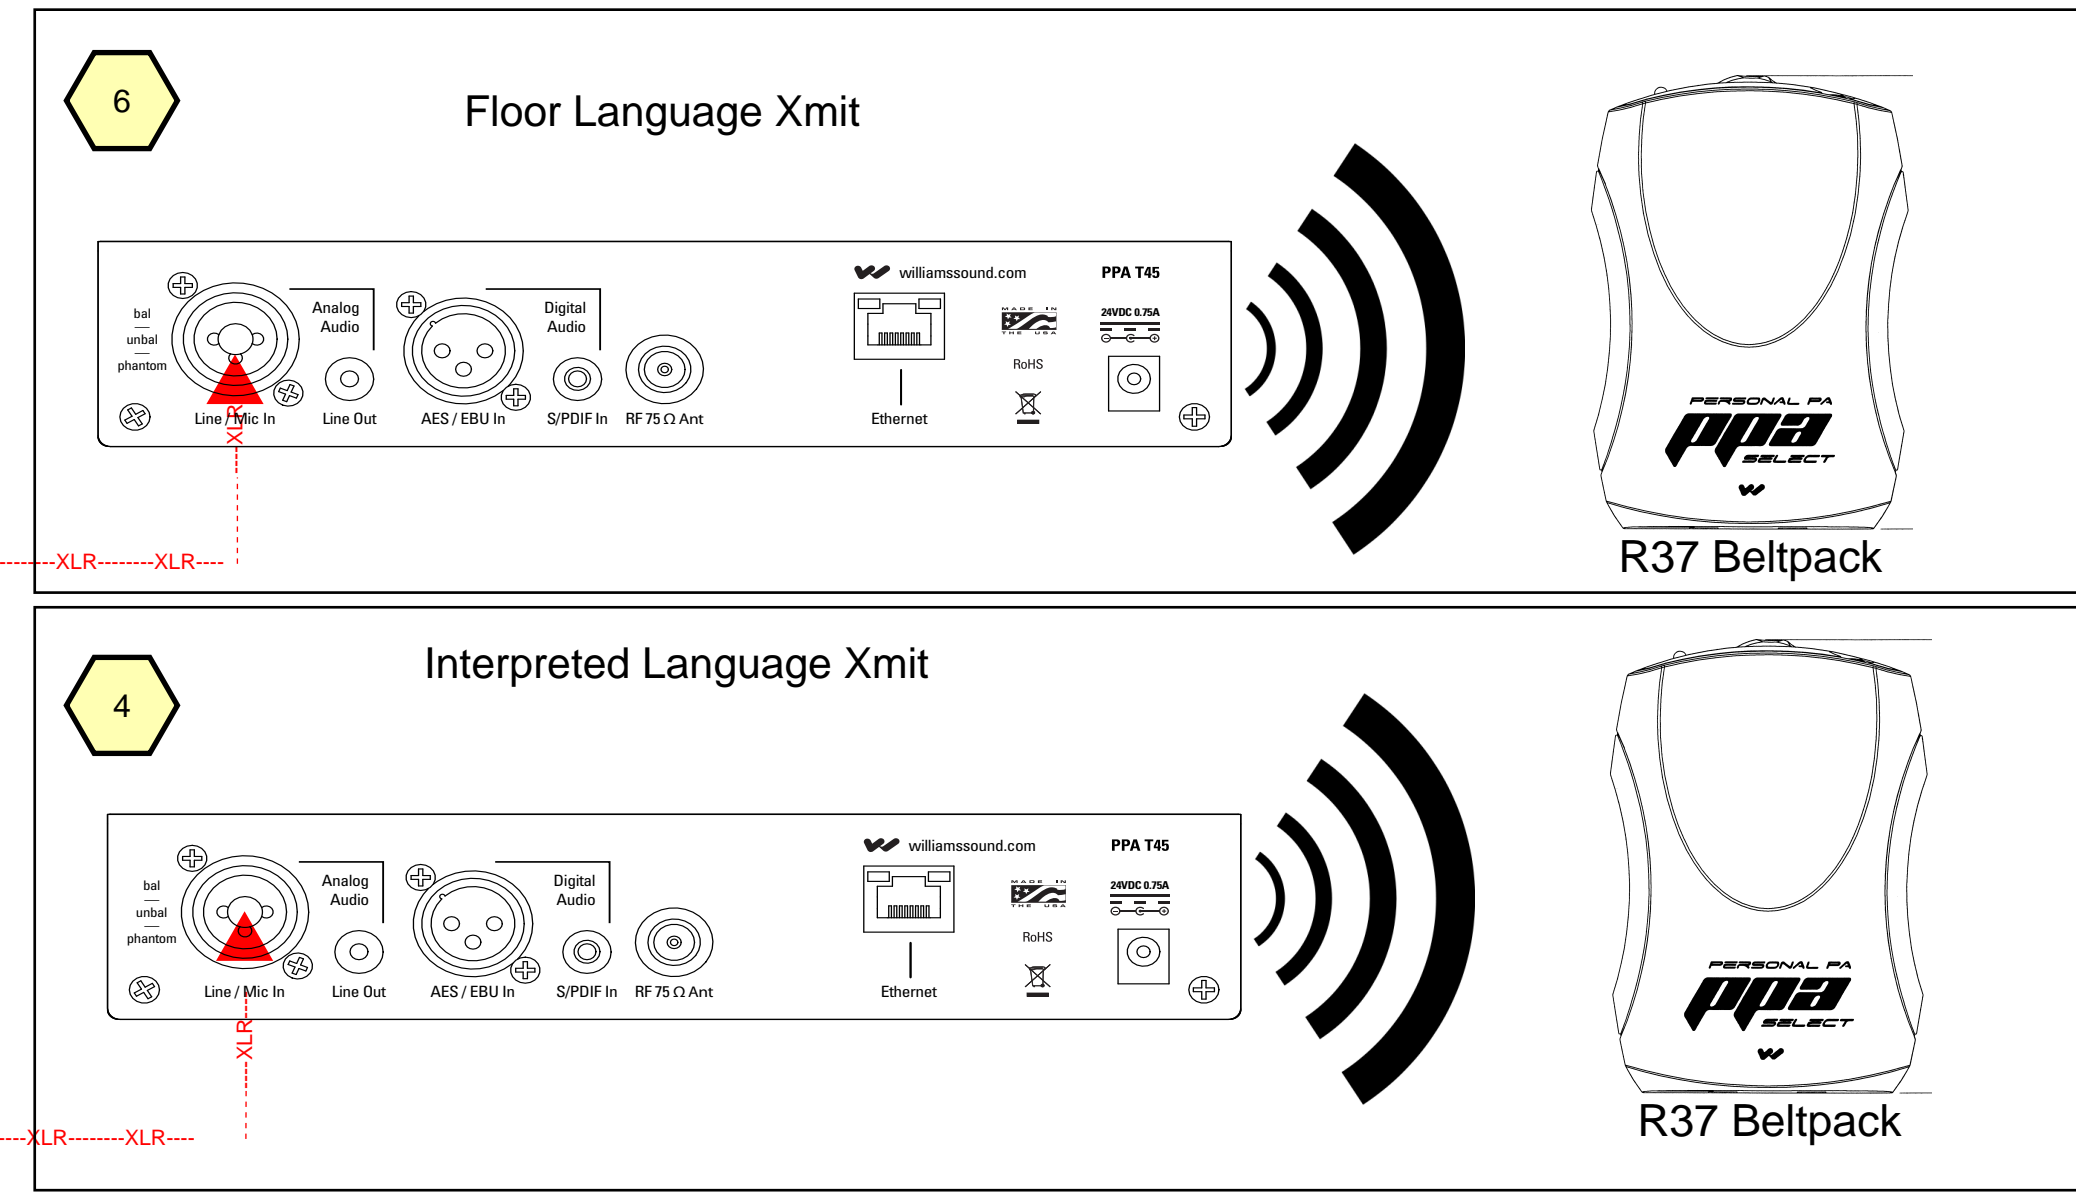
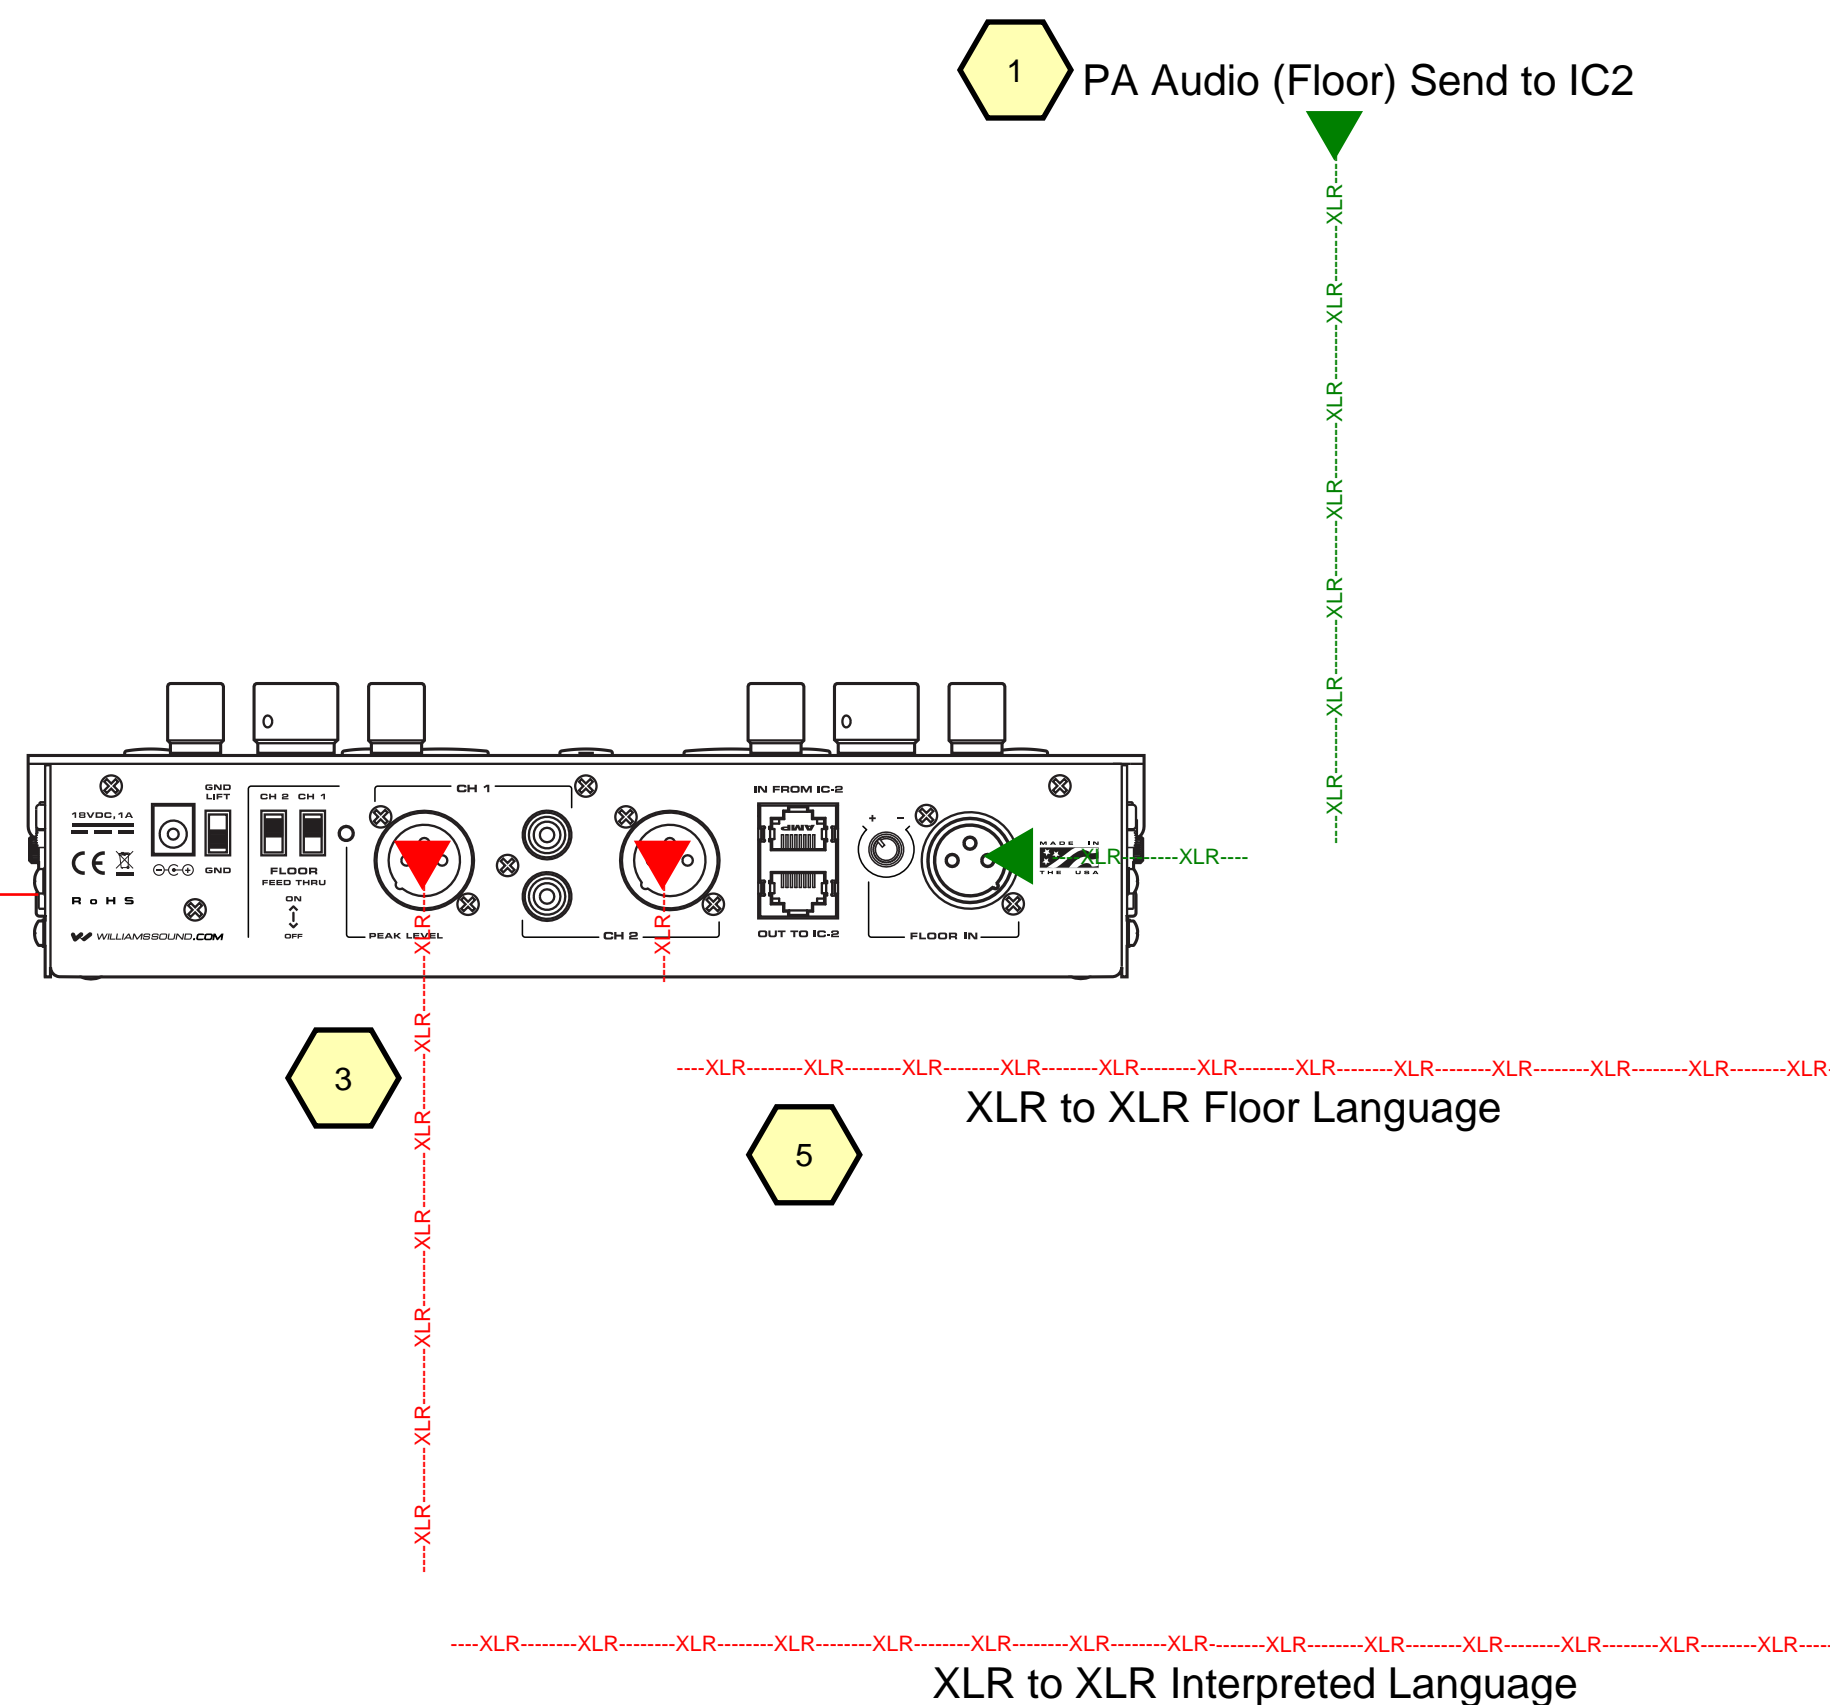


1 2 3 4 5 6 7 8

A  
B  
C  
D  
E  
F

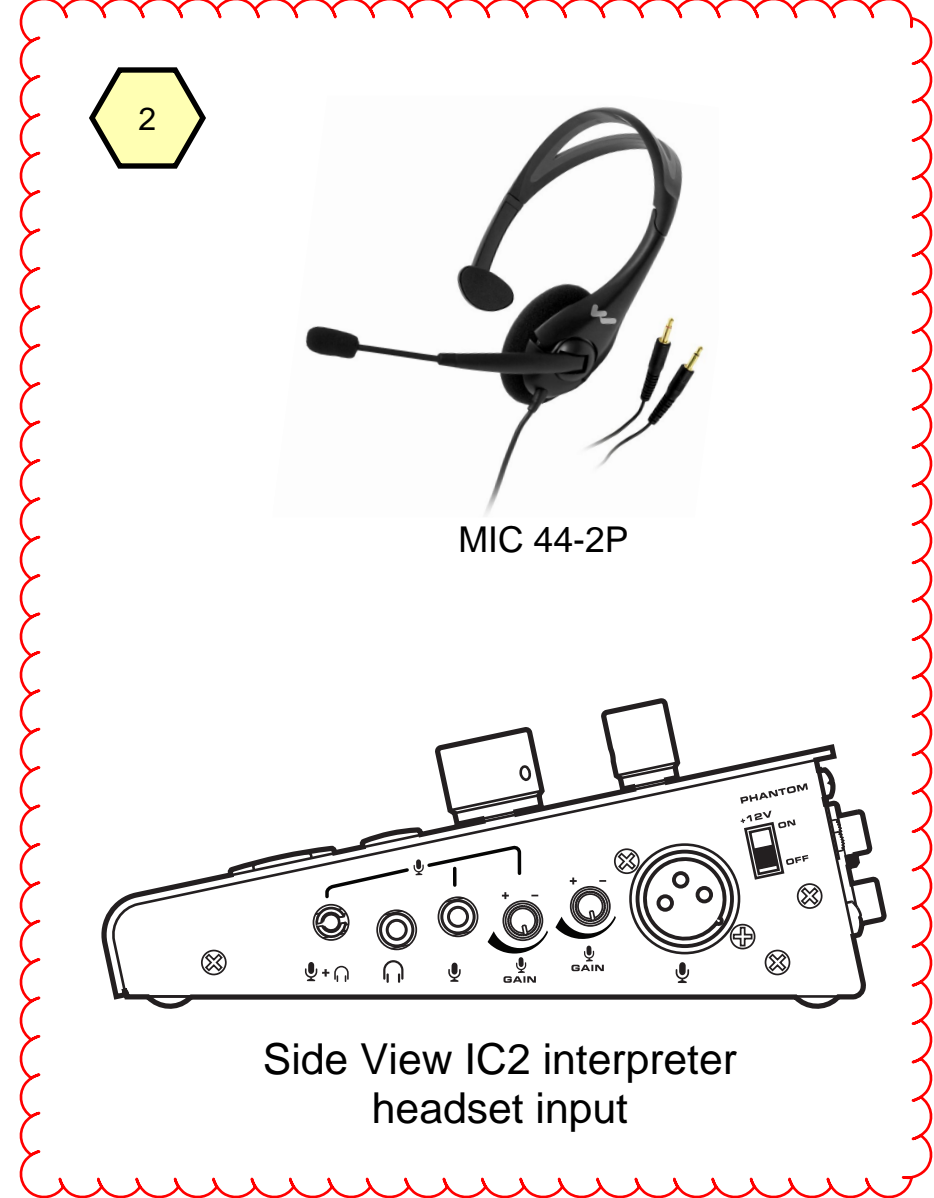

- Installation Notes**
- 1 Floor audio from podium/mixer to IC2
  - 2 Interpreter plugs mic or headset into IC2
  - 3 The interpreted language leaves IC2 via XLR Ch1
  - 4 The interpreted language enters T45 FM transmitter via XLR
  - 5 The floor language leaves IC2 via XLR Ch2
  - 6 The floor language enters T45 FM transmitter via XLR

SCALE: NA

DESIGNED FOR  
WILLIAMS DESIGN  
CENTER

PROJECT  
1 Language Translation with  
Floor Speech

**WILLIAMS SOUND®**  
HELPING PEOPLE HEAR

Williams Sound  
10300 Valley View Rd.  
Eden Prairie, MN 55344  
1.800.328.6190

Rev	Date	Designer

SHEET  
DC1